


ALL OPERATIONS MUST BE CARRIED OUT BY QUALIFIED PERSON

- ① Insert the base pins into the stems of the lamp and fix it with the screws provided. Don't remove the template during this procedure.


Inserire i perni della base negli steli della lampada e fissarla con le viti fornite.  
Non rimuovere la dima durante questa operazione.

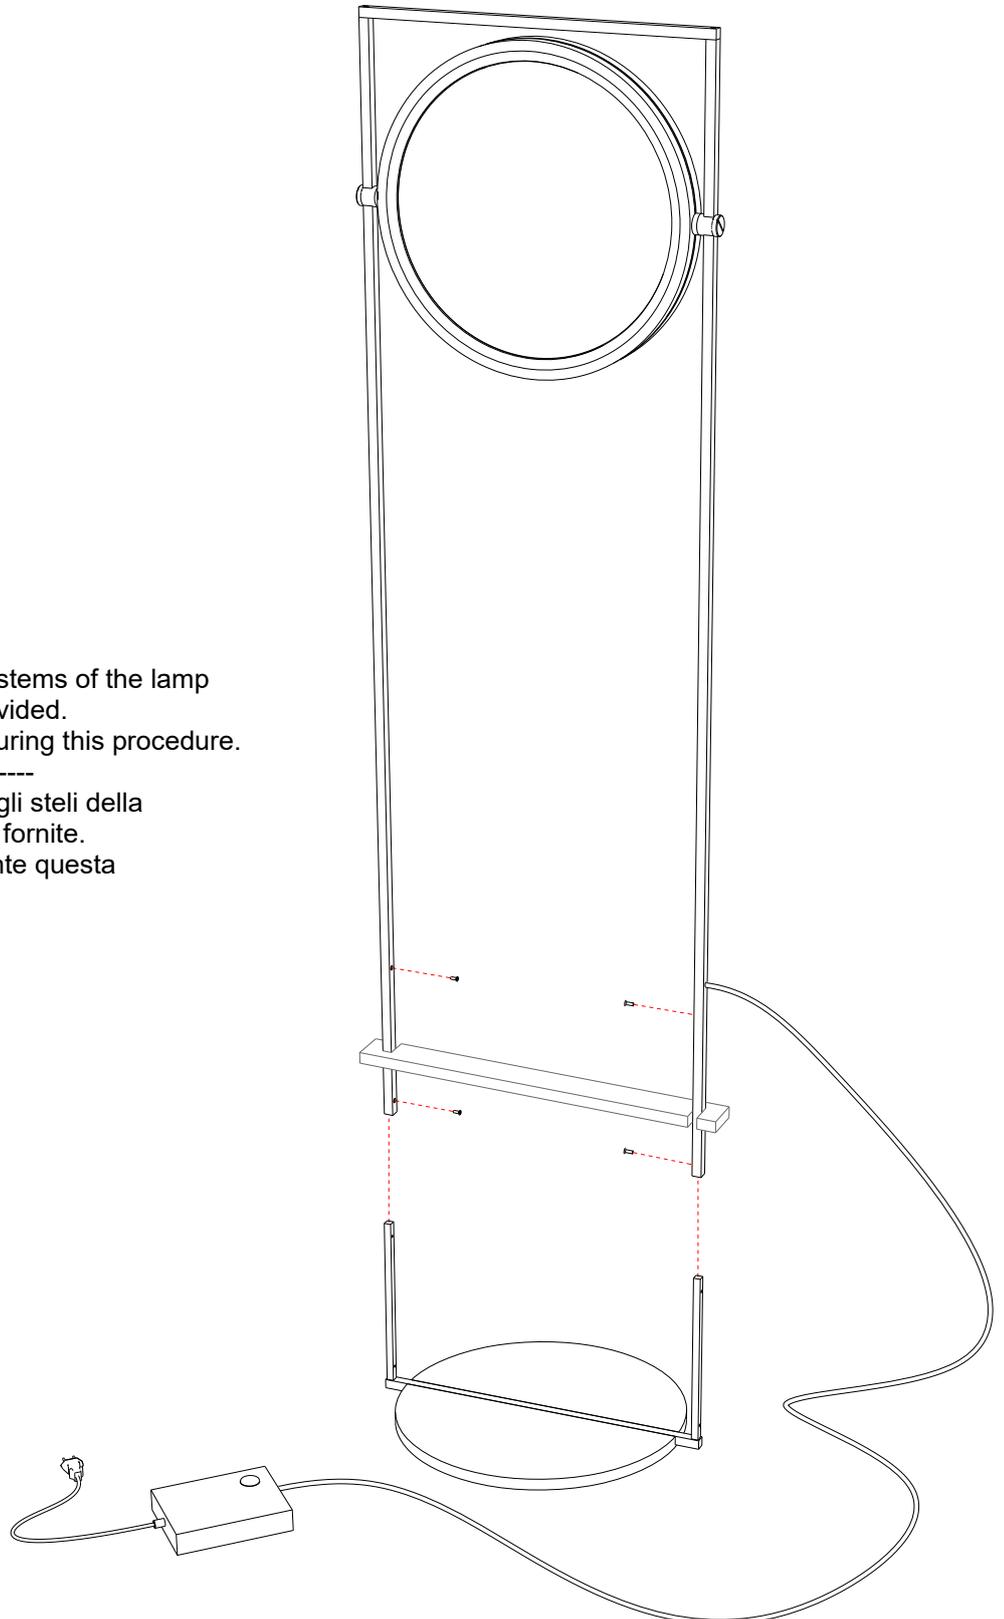

ALL OPERATIONS MUST BE CARRIED OUT BY QUALIFIED PERSON


- ② Rotate the template and remove it from the lamp's stems

Ruotare la dima e rimuoverla dagli steli della lampada.

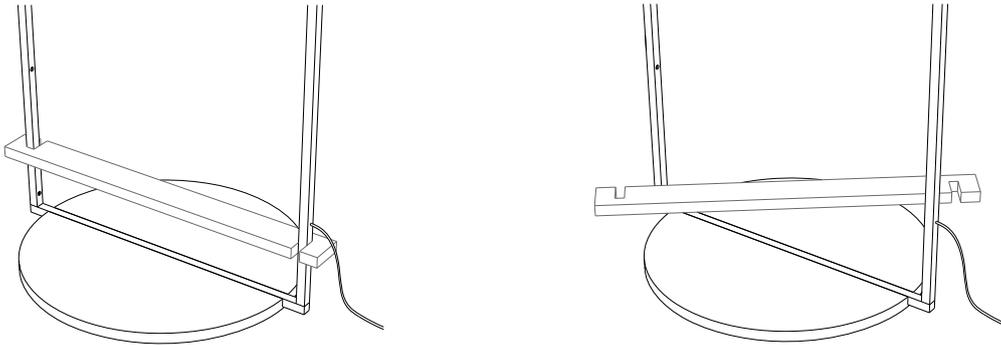

- ③ Tap the button to switch on the lamp.


Premere leggermente il pulsante per accendere la lampada.

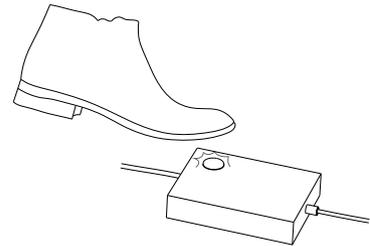

- ④ Keep pushing the button to set light's intensity.  
It will grow till the maximum level and then it will start decreasing in an infinite loop, that will last till the button is released.


Mantenere premuto il pulsante per regolare l'intensità luminosa.

Essa aumenterà fino al livello massimo e poi inizierà a calare in un ciclo continuo che durerà fino al rilascio della pressione sul pulsante.

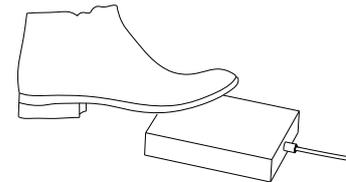

- ⑤ Tap the button to switch off the lamp.

Premere leggermente il pulsante per spegnere la lampada.

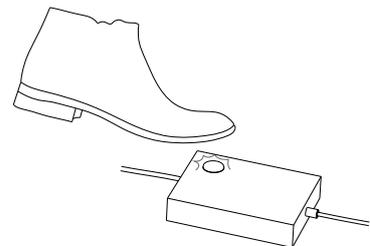

- ④ Once the lamp is switched on, the light's intensity will be the one of the previous usage.  
To modify light's intensity repeat steps n° 1-2.

Una volta accesa la lampada, l'intensità luminosa sarà quella impostata nell'utilizzo precedente.

Per modificare l'intensità luminosa ripetere i passaggi n° 1-2.